

Balco 260


Balcony Solar System


User Manual v1.4

Important Instructions

Read and understand this manual before use and keep it handy for future reference.

Inspect the unit for any visible damage or missing accessories before first use. For assistance, contact BLUETTI support or your local dealer.

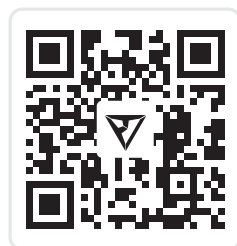

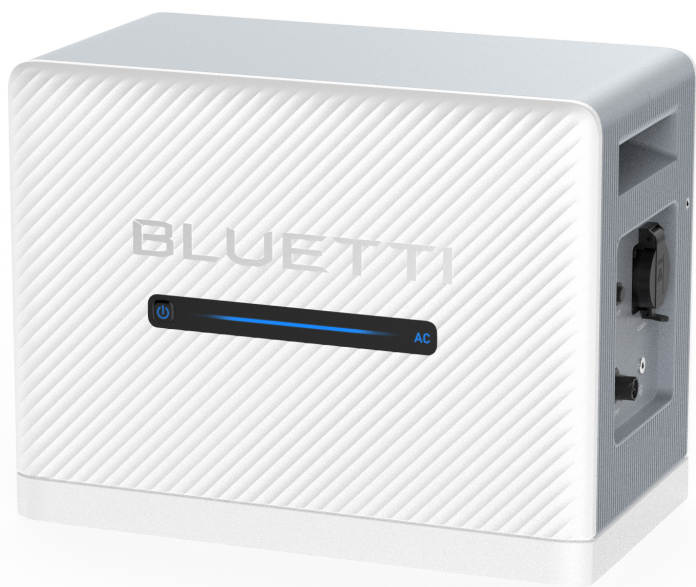

Legal Information

Copyright © 2026 Shenzhen PowerOak Newener Co., Ltd. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without the prior written consent of Shenzhen PowerOak Newener Co., Ltd.

Notice

BLUETTI's products and services are subject to the terms and conditions agreed upon during purchase. Some aspects described in this manual may not be available under your purchase contract. Unless otherwise specified in the contract, BLUETTI makes no express or implied representations or warranties regarding the contents of this manual. BLUETTI should assume no liability for the failures, damages, or injuries resulting from force majeure, repair attempts by unqualified personnel, or improper installation and operation.

The contents of this manual are subject to change without notice. Please obtain the latest version from BLUETTI official website.

If you have any questions or concerns about this manual, please contact BLUETTI support for further assistance.

Shenzhen PowerOak Newener Co., Ltd.

F19, BLD No.1, Kaidaer, Tongsha RD No.168, Xili street, Nanshan, Shenzhen, China

Website: <https://www.bluettipower.com/>

Contents

- 1. Safety Information 05
 - 1.1 Important Guidelines 05
 - 1.2 Important Safety Instructions 05
 - 1.3 Operation Guidelines 06
 - 1.4 Maintenance and Care 06
 - 1.5 Grounding Requirements 06
- 2. Packing List 07
- 3. Get to Know Your Balco 260 System 09
 - 3.1 Dimensions 09
 - 3.2 Overview 10
 - 3.3 Power Button 11
 - 3.4 Status Indicator 12
- 4. Install Your Balco 260 System 13
 - 4.1 Required Tools & Accessories 13
 - 4.2 Environment Requirements 13
 - 4.3 System Configuration 14
 - 4.4 Mount the System 14
 - 4.5 Grounding 18
 - 4.6 Remove the System 18
- 5. Electrical Connection 19
 - 5.1 Connect to Solar Panels 19
 - 5.2 Connect to the Grid 21
 - 5.3 Power Your Devices 22
- 6. Specifications 23
 - 6.1 Balco 260 23
 - 6.2 BC260 24
- 7. Troubleshooting 25
- FAQs (Frequently Asked Questions) 27

1. Safety Information

Before using this product, please read the manual carefully and follow all safety instructions. Pay close attention to the **Attentions**, **Notes**, and other safety labels in the manual and on the product itself. If you have any questions or encounter a situation not addressed in this manual, please contact us. Improper use or unauthorized operation may result in injury or damage, which is not covered by the warranty.

1.1 Important Guidelines

For optimal performance and safety, please follow these essential guidelines:

- Always operate and store the product in the conditions specified in this manual.
- Ensure the product is used in compliance with all relevant standards and regulations.

BLUETTI is not liable for the following situations or any resulting consequences:

- Damage caused by force majeure, including natural disasters, extreme weather, or armed conflict.
- Damage resulting from unauthorized adjustments, modifications, or removal of product labels.
- Damage caused by customer or third-party negligence, misuse, or intentional harm, or improper handling, including during transportation.
- Damage caused by improper installation, storage, or use outside the conditions specified in this manual or applicable standards.
- Damage or negative outcomes resulting from use of non-compliant materials or tools.

1.2 Important Safety Instructions

- Always disconnect all power sources before servicing.
- Handle the product with care and place it upright as instructed.
- Do not invert, tilt, lay it on its side, or stack it improperly to prevent damage from impact or falls.
- Never use the product near open flames, heat sources, or in environments with radiation, solvents, corrosive gases, or conductive dust.
- Do not clean the product with liquids.
- Do not use damaged batteries, as they may cause leakage, smoke, release of flammable gases, overheating, fire, or explosion.
- If a battery leaks or emits an odor, don't approach it — contact qualified personnel for safe handling and disposal.
- Store batteries separately. Keep damaged batteries at least 3 m away from flammable materials and other equipment. Dispose of them in accordance with local laws and regulations.

- Keep fire protection equipment available, such as fire extinguishers or fire sand. In case of fire, use a dry powder fire extinguisher appropriate for the product.
- Do not disassemble the system; take it to a qualified service person if service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
- Have a qualified electrician handle any direct connection to a main panel.

1.3 Operation Guidelines

- Ensure correct polarity when connecting solar panels or operating in parallel.
- Do not short-circuit the positive and negative terminals of any battery or battery string.
- Do not connect the battery directly to AC input power.
- Do not set **On-Grid Rated Output Power** above 800 W in the BLUETTI app unless permitted by local regulations. Higher settings may impact performance and safety. BLUETTI is not liable for any resulting consequences.


1.4 Maintenance and Care

- Recommended storage temperature: 20°C to 40°C.
- For long-term storage, charge the system every 6 months and keep the battery above 45% SoC.


1.5 Grounding Requirements

This product must be grounded when connected to the grid. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.


2. Packing List

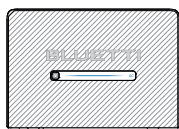


Balco 260
Balcony Solar System



Bidirectional AC Power Cable
(3 m)




MC4 Spanner



L-Shaped Wall Bracket
×2



M5 × 10 Screw
×3



M8 × 60 Expansion Bolt
×2




Quick Start Guide,
Warranty Card &
Quality Certificate

Note: You can purchase the following optional accessories from <https://www.bluettipower.com> or authorized BLUETTI distributors.


BC260 Expansion Battery



BC260
Expansion Battery



L-Shaped Wall Bracket
×2




M8 × 60 Expansion Bolt
×2




M5 × 10 Screw
×2

Other Accessories

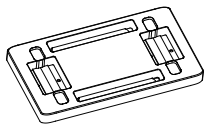

Base

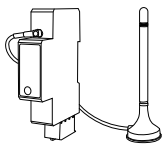


S Meter
Smart Meter



S1
Smart Plug



Solar Extension Cable
(3 m/5 m/10 m)



Solar Parallel Charging Cables
(0.3 m)


3. Get to Know Your Balco 260 System

The Balco 260 system harnesses solar energy through solar panels and converts it into usable power. It then intelligently manages power flow, automatically balancing energy between home use and battery storage, or both at the same time, while also powering devices through the AC output port.


When needed, the built-in inverter converts the electricity into AC power and feeds it into your home circuit through wall outlets, delivering clean and reliable energy day and night.

3.1 Dimensions

Balco 260

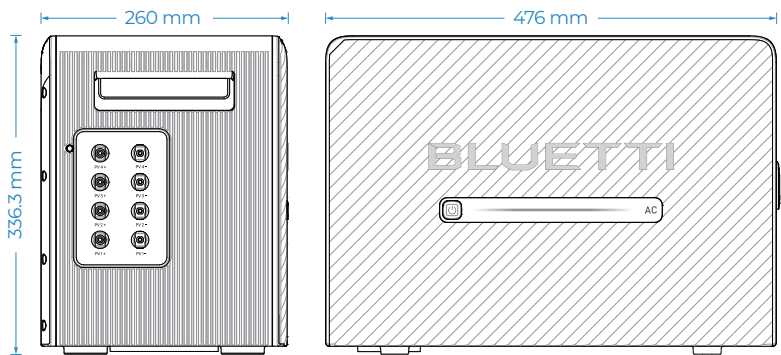


BC260

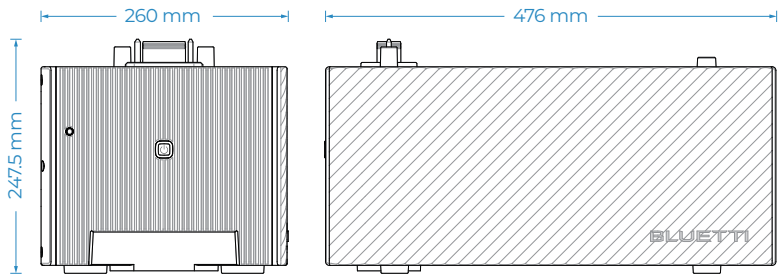

3.2 Overview

Balco 260

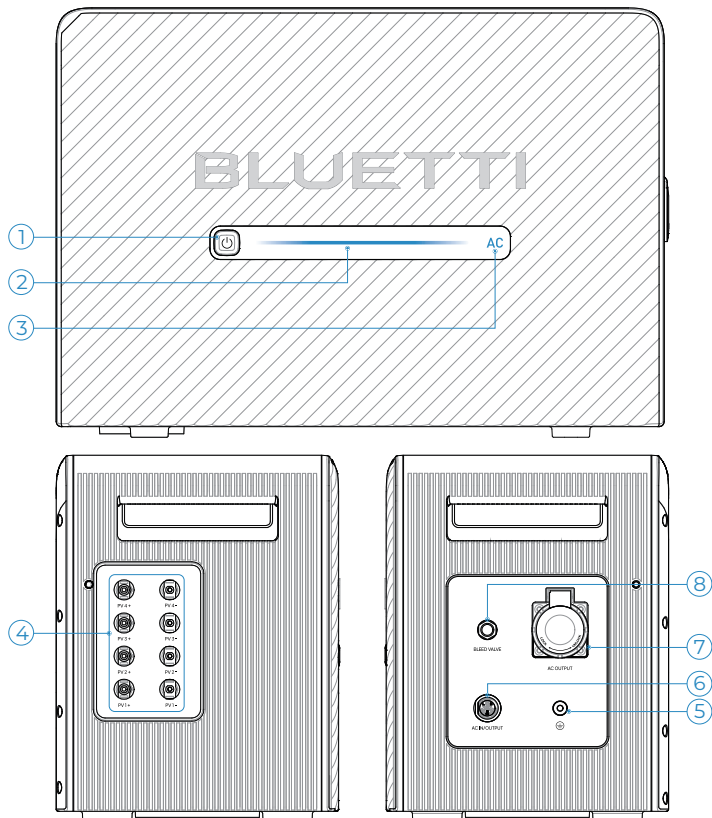

① Power Button*

② Status Indicator

③ AC Output Indicator*

④ PV Inputs


⑤ Grounding Terminal

⑥ AC Grid Port (Input/Output)

⑦ AC Output Port

⑧ Bleed Valve


*A blue light indicates the system or AC output is on. If the light is off, the system or AC output is off.

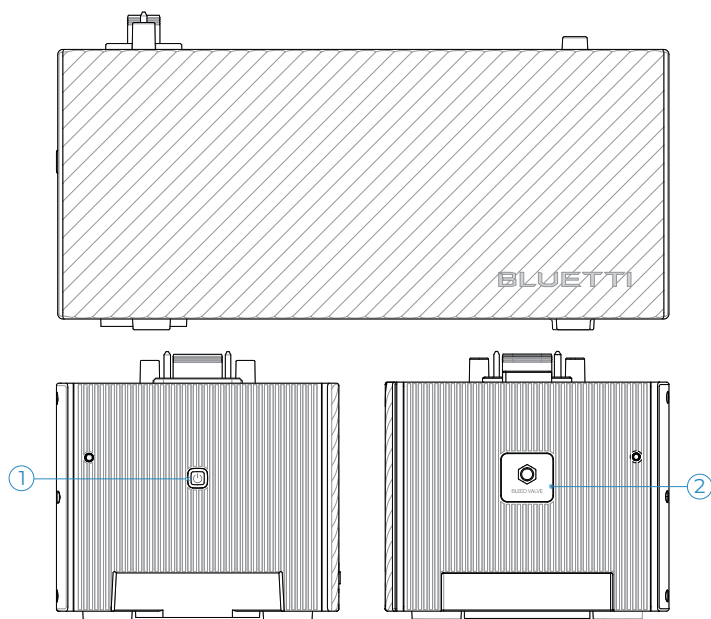

① Power Button



② Bleed Valve

3.3 Power Button

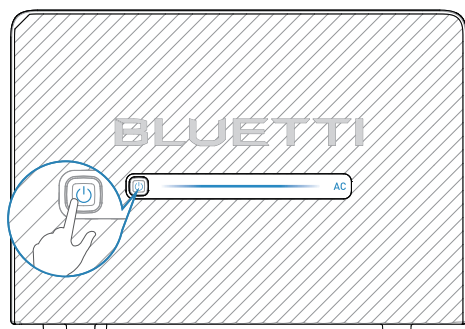

- Press and hold for 3 seconds to power the Balco 260 system on or off.
- Press and hold for 1 second to turn the AC output on or off.
- Press 3 times to clear system errors shown by the yellow indicator. If the error persists, restart the system.
- Press 4 times and hold for 2 seconds to restore factory settings.

3.4 Status Indicator

Indicator	Description	Status
	The indicator moves from both ends toward the center, then extends outward from the center.	Power on
	The indicator fades from both sides toward the center.	Power off
	The indicator breathes.	Charging
100% 50% 25% 	The indicator stays solid.	Battery level / standby / discharging / self-heating
	The indicator scrolls from left to right repeatedly.	Firmware update

Notes:


- The indicator displays battery level in four bars, each representing 25% SoC. When SoC drops below 5%, the first bar flashes. At 0%, it flashes for 5 seconds, then turns off.
- A blue light indicates the system is connected to Wi-Fi; white means it is not.
- A steady yellow or red light indicates a system fault. Check the BLUETTI app for details.

4. Install Your Balco 260 System


Attention:

- Always power **OFF** the Balco 260 system before installation and wiring.
- Connect the system to an external ground to avoid electric shock.


4.1 Required Tools & Accessories

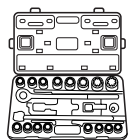


Socket Wrench Set



Hammer



Phillips Screwdriver



Electric Drill
(8 mm bit)



Grounding Cable
(Yellow-green, 1 mm²)




Ring Terminal
(For 1 mm² grounding
cable and M5 screws)



Heat-Shrink Tube
(Ø8 mm × 25 mm)



Heat Gun



Crimper



Insulated Gloves









Marker

4.2 Environment Requirements

- Keep the system away from heat sources, open flames, and explosive materials.
- Do not install in areas prone to flooding.
- Max. operating altitude: 5,000 m

4.3 System Configuration

The Balco 260 system supports up to 5 BC260 expansion batteries.

Balco 260 & BC260 Battery						
No. of BC260 Batteries	0	1	2	3	4	5
Capacity	2,560 Wh	5,120 Wh	7,680 Wh	10,240 Wh	12,800 Wh	15,360 Wh


Note: The Balco 260 system supports a distributed setup. For details, refer to the *Balco 260 App User Manual*.

4.4 Mount the System


This section uses two BC260 batteries as an example.

Step 1: Position the bottom BC260.

- Ensure the Balco 260 system is within range of a 2.4 GHz Wi-Fi network for connection.
- Place the BC260 with its back against the wall.
- Keep a 37–47 mm clearance from the wall.

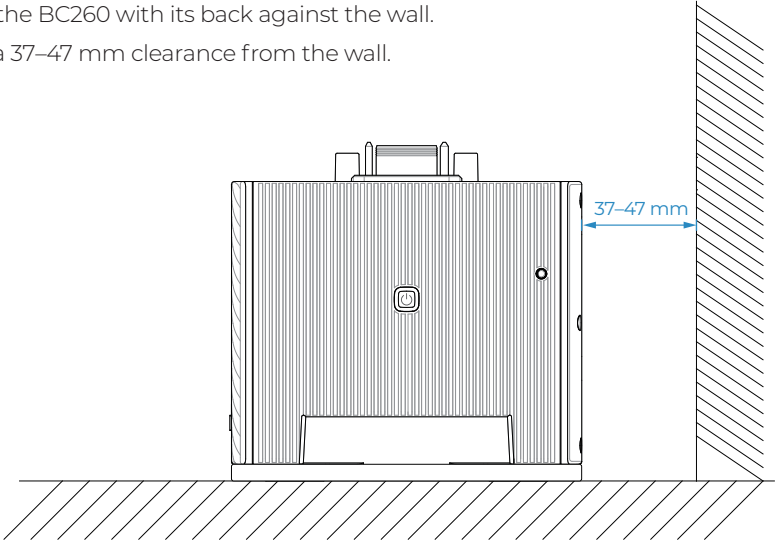


Step 2: Unscrew and remove the waterproof covers.

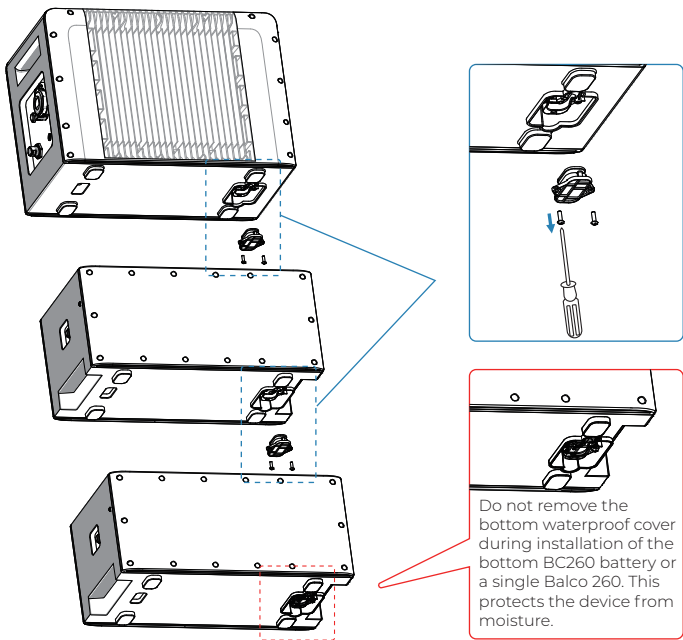


Step 3: Stack the modules.

- Align the matching ports.
- Place the Balco 260 on top of the BC260 batteries.

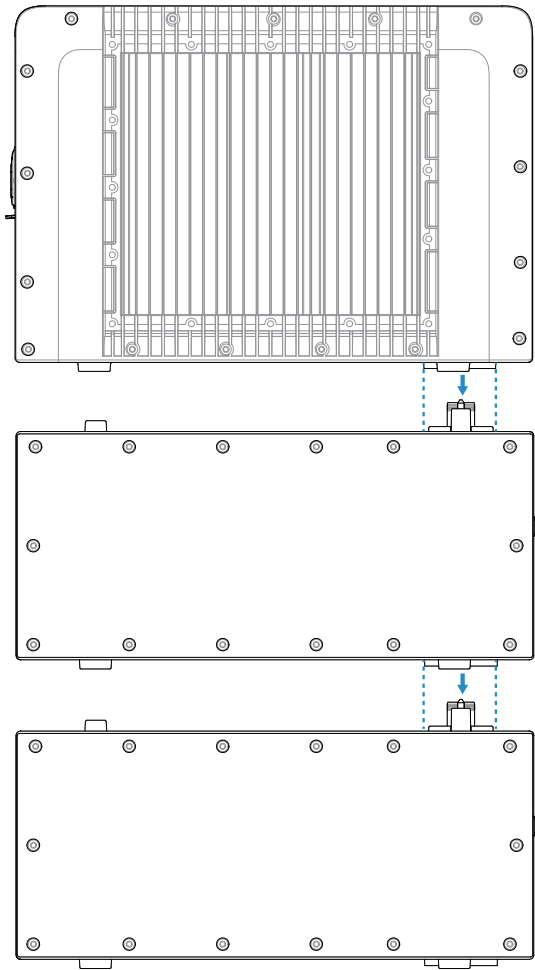

Step 4: Install the L-shaped wall brackets.


- Attach the L-shaped bracket to one side of the Balco 260 with an M5 screw, leaving it slightly loose.
- Mark the mounting hole.
- Rotate the bracket downward.
- Drill the marked hole.
- Insert the expansion bolt into the hole.
- Rotate the bracket back into position.
- Tighten the expansion bolt.
- Fully secure the M5 screw.

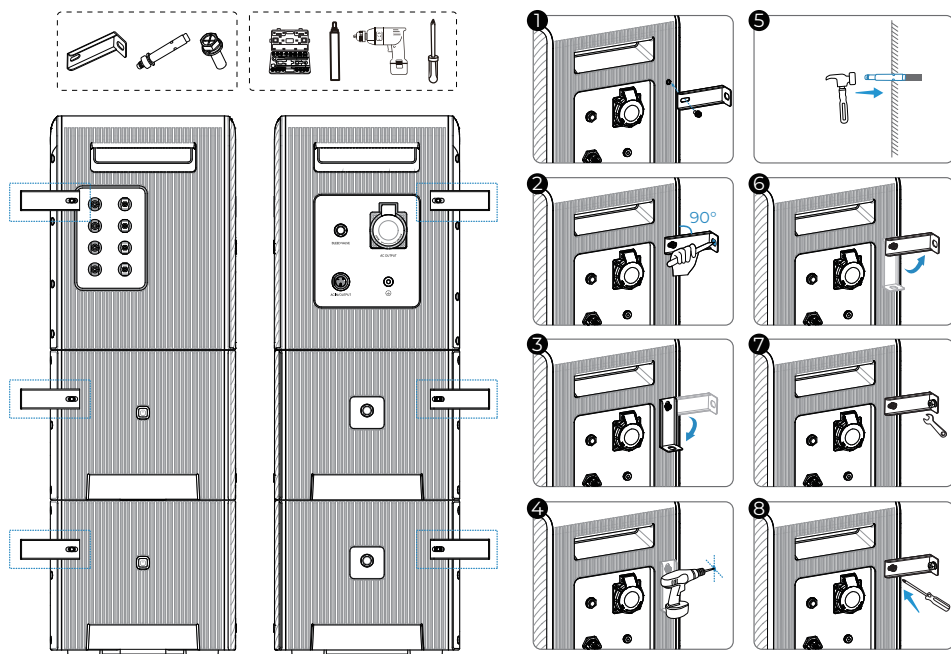

- Repeat on the opposite side of the Balco 260 and on both sides of each BC260 battery.


4.5 Grounding

- Step 1:** Strip the grounding cable insulation.
- Step 2:** Slide on the heat-shrink tube and ring terminal.
- Step 3:** Crimp the ring terminal firmly.
- Step 4:** Shrink the tube over the crimped area with a heat gun.
- Step 5:** Loosen the pre-installed screw and secure the cable.

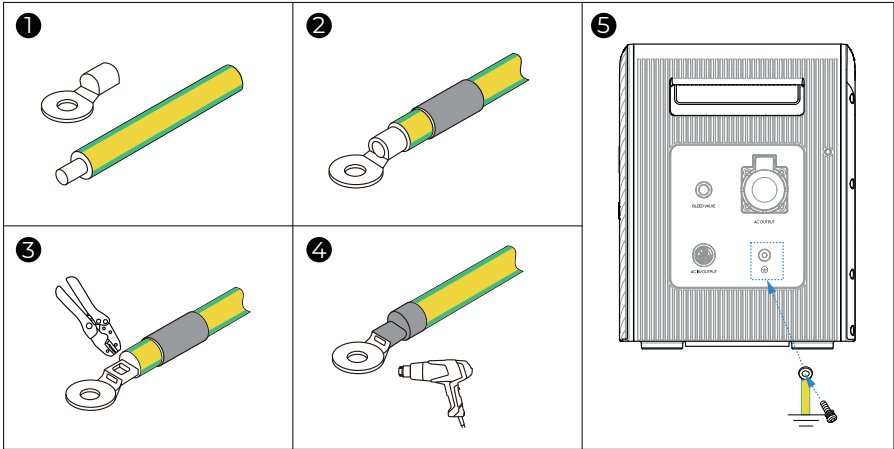

4.6 Remove the System

- Step 1:** Disconnect the PV connectors with the MC4 spanner. Then unplug all cables from the solar panels, wall outlet, and any connected devices.
- Step 2:** Press and hold the Balco 260 power button for 3 seconds to turn off the system.
- Step 3:** Loosen and remove the L-shaped brackets on both sides of the units.
- Step 4:** Lift off the top Balco 260 unit first, then remove the BC260 batteries.

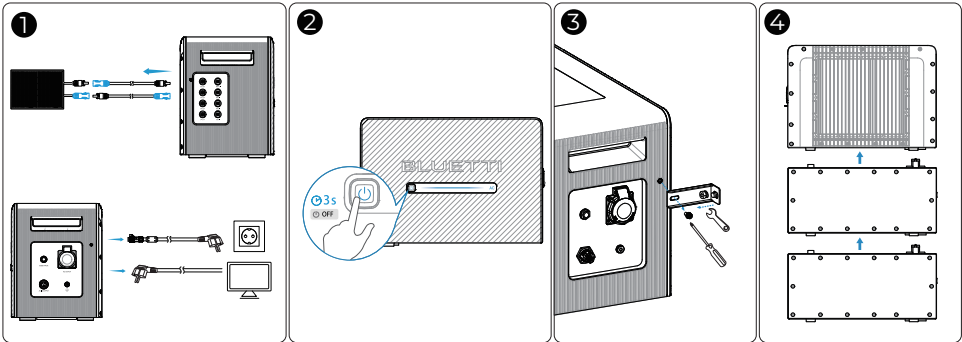

5. Electrical Connection

Attention: Do not turn on or use the system if the terminals are wet.


5.1 Connect to Solar Panels

Ensure the solar panel(s) connected to each MPPT meet the following requirements:


Total Voc: 15 V–60 V Current: 16 A Max.

Attention:

- Cover any unused PV inputs with the waterproof caps.
- In parallel setups, ensure the total short-circuit current (I_{sc}) does not exceed 20 A.
- Do not connect solar panels in series. The input voltage may exceed 60 V and damage your system.

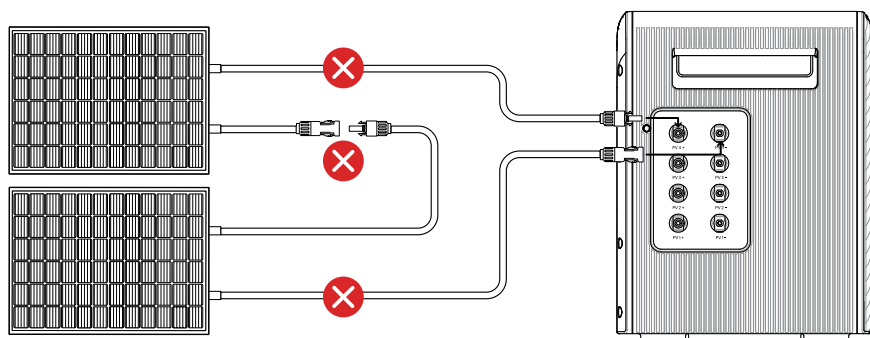


- Do not connect the same set of PV connectors to multiple PV input sets.

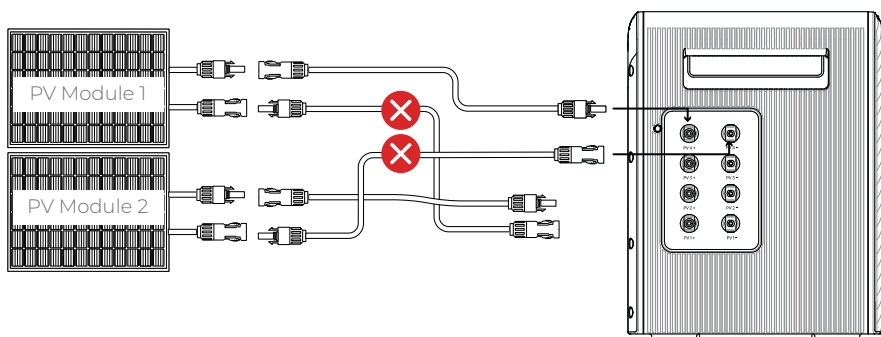


Direct Connection

Connect a single solar panel directly to one PV input set. Use a solar extension cable if needed.

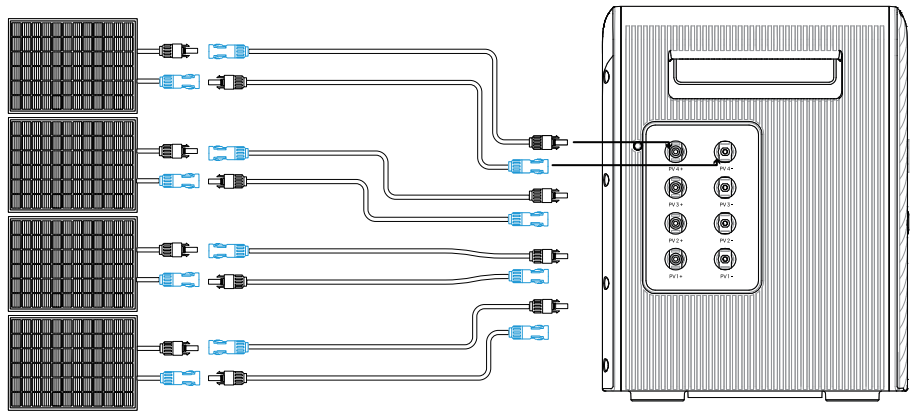


Parallel Connection

Use solar parallel charging cables to connect two solar panels in parallel to the same PV input set.

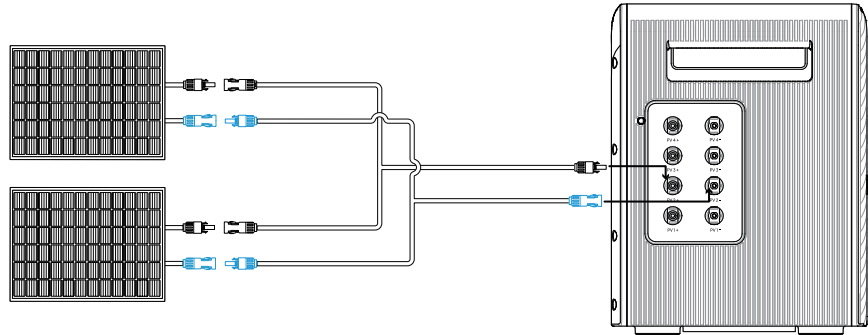


Note: The direct connection supports up to 4 panels, while a parallel connection supports up to 8 panels.

For third-party cables, use ones with a 4 mm² cross-section and a 20 A rating, as shown below.

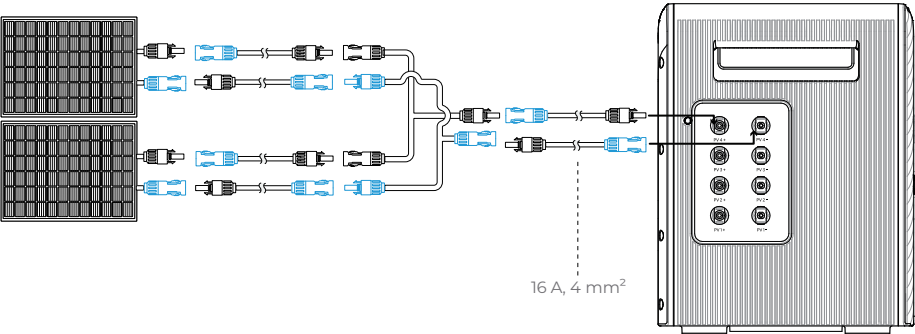


5.2 Connect to the Grid

Connect the bidirectional AC power cable to the Balco 260's AC grid port to charge the system or feed power into the grid.

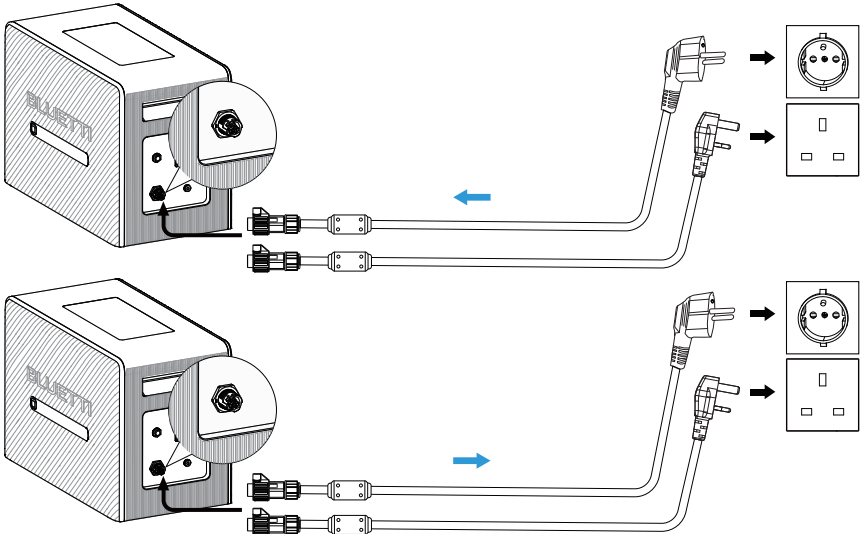

5.3 Power Your Devices

Plug your devices into the Balco 260's AC output port to power them.

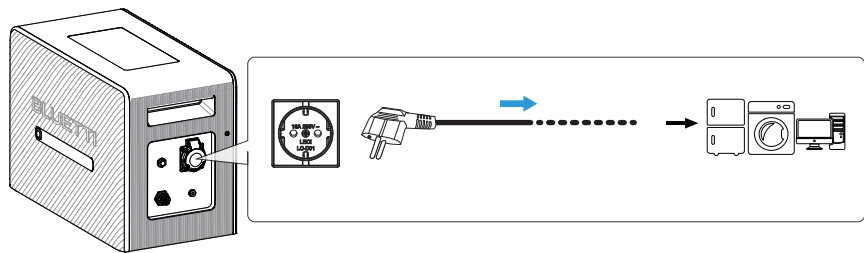

The Balco 260 is compatible with the BLUETTI smart meter (S Meter) and S1 smart plug. For details, please refer to their respective user manuals.

6. Specifications

6.1 Balco 260

Model	Balco 260-800	Balco 260-1000	Balco 260-1200
PV Input (per MPPT)			
Max. PV Input Power	600 W (2,400 W total)		
Max. PV Input Voltage	60 d.c.V		
MPPT Voltage Range	15–60 d.c.V		
Max. Input Current	16 d.c.A		
Max. PV Short-Circuit Current	20 d.c.A		
No. of MPP Trackers	4		
AC Input (Grid-Tied)			
Max. AC Input Power	2,300 VA		
Max. AC Input Current	10 a.c.A		
Max. AC Charging Power	1,200 VA		
Max. AC Charging Current	5.22 a.c.A		
Rated AC Input Voltage	230 a.c.V		
AC Input Frequency	50/60 Hz		
AC Output (Grid-Tied)			
Max. AC Output Power	800 VA	1,000 VA	1,200 VA
Max. AC Output Current	3.48 a.c.A	4.35 a.c.A	5.22 a.c.A
Rated AC Output Voltage	230 a.c.V		
AC Output Frequency	50/60 Hz		
Power Factor	> 0.99 (default), adjustable 0.8 lagging to 0.8 leading		
AC Output (Off-Grid)			
Max. AC Output Power	1,200 VA		
Max. AC Output Current	5.22 a.c.A		
Max. AC Bypass Output Power	2,300 VA		
Max. AC Bypass Output Current	10 a.c.A		
AC Nominal Output Voltage	230 a.c.V		
AC Output Frequency	50/60 Hz		
Battery			
Battery Type	LFP		
Rated Capacity	2,560 Wh (100 Ah)		
Rated Voltage	25.6 d.c.V		

General	
Dimensions (L × W × H)	476 × 260 × 336.3 mm
Weight	Approx. 28 kg
Installation	Stackable
Operating Temperature	-20°C to 55°C
Storage Temperature	-20°C to 45°C (≤ 1 month), 0°C to 35°C (> 1 month)
Storage Humidity	10%–90%
Cooling	Passive cooling
Protection Rating	IP65
Max. Operating Altitude	5,000 m
Inverter Type	Isolated
Protection Class	Class I

6.2 BC260

Item	Rating
Battery Type	LFP
Rated Capacity	2,560 Wh (100 Ah)
Rated Voltage	25.6 d.c.V
Max. Charge/Discharge Current	60 d.c.A
Max. Parallel Units	5
Operating Temperature	-20°C to 55°C
Protection Rating	IP65
Max. Operating Altitude	5,000 m
Dimensions (L × W × H)	476 × 260 × 247.5 mm
Weight	Approx. 25 kg
Storage Temperature	-20°C to 45°C (≤ 1 month), 0°C to 35°C (> 1 month)
Storage Humidity	10%–90%

7. Troubleshooting

Error Code	Description	Solutions
E001	Inverter overload	• Check device power usage. • Reduce load if too high.
E002	Inverter overtemperature, AC output off	• Allow the system to cool; it will resume automatically. • Press and hold the power button for 1 second to turn on AC output. • Move the system to a well-ventilated location away from heat sources or direct sunlight.
E003	Inverter short circuit	• Check devices for short circuits. • Disconnect and restart the system. If the issue persists, please contact BLUETTI support for assistance.
E028	Inverter undertemperature, AC output off	• Operate the system within an ambient temperature range of -20°C to 55°C.
E033	PV1 input overvoltage	• Make sure the PV1 input voltage is below 60 V.
E034	PV2 input overvoltage	• Make sure the PV2 input voltage is below 60 V.
E035	PV3 input overvoltage	• Make sure the PV3 input voltage is below 60 V.
E039	PV1 overtemperature	• Allow the system to cool; it will resume automatically. • Move the system to a well-ventilated location away from heat sources or direct sunlight.
E040	PV2 overtemperature	
E041	PV3 overtemperature	
E046	PV insulation resistance fault	• Ensure solar panels and PV connectors are free of debris or water. • Inspect cables for damage.
E049	PV4 input overvoltage	• Make sure the PV4 input voltage is below 60 V.
E051	PV4 overtemperature	• Allow the system to cool; it will resume automatically. • Move the system to a well-ventilated location away from heat sources or direct sunlight.
E053	PV1 undertemperature	• Operate the system within an ambient temperature range of -20°C to 55°C.
E054	PV2 undertemperature	

Error Code	Description	Solutions
E055	PV3 undertemperature	Operate the system within an ambient temperature range of -20°C to 55°C.
E056	PV4 undertemperature	
E081	Overvoltage	Restart the system. If the issue persists, please contact BLUETTI support for assistance.
E082	Undervoltage	Charge the system via solar or AC power.
E083	Cell overvoltage	Restart the system. If the issue persists, please contact BLUETTI support for assistance.
E084	Cell undervoltage	Charge the system via solar or AC power.
E085	Charging overtemperature	Wait for the system to cool before using it again.
E086	Charging undertemperature	Operate the system within an ambient temperature range of -20°C to 55°C.
E087	Discharging overtemperature	Wait for the system to cool before using it again.
E088	Discharging undertemperature	Operate the system within an ambient temperature range of -20°C to 55°C.
E089	Charging overcurrent	Restart the system. If the issue persists, please contact BLUETTI support for assistance.
E090	Discharging overcurrent	
E113	Grid overvoltage	- Verify the home grid voltage is within the unit's operating range. - Contact utility company if necessary.
E114	Grid undervoltage	
E115	Grid overfrequency	- Verify the home grid frequency. - Contact utility company if necessary.
E116	Grid underfrequency	
E117	Grid oscillation	- Ensure the grid is stable. - Wait 5 minutes for the system to clear the error automatically, or restart the system.
E127	Grid not connected	Make sure the bidirectional AC power cable is firmly connected.
P022	BC260 charging overtemperature	- Power off and let it cool for 10 minutes. - Restart the unit.
P023	BC260 charging undertemperature	Operate the system within an ambient temperature range of -20°C to 55°C.

Error Code	Description	Solutions
P038	BC260 discharging overtemperature	• Power off and let it cool for 10 minutes. • Restart the unit.
P039	BC260 discharging undertemperature	• Operate the system within an ambient temperature range of -20°C to 55°C.
Others	/	• Please contact BLUETTI support for assistance.

FAQs (Frequently Asked Questions)

Q1: What precautions should I take during installation, use, and storage?

- A:**
- Make sure the system is in good condition before use. Do not disassemble it.
 - Place the system in a clean, dry, well-ventilated area, away from heat sources, open flames, and flammable materials.
 - Before storage, charge the battery to 50%–80%. Do not store the system for long periods with a low battery level.
 - For long-term storage, charge the system every 6 months—discharge it to below 20%, then recharge it to above 45% SoC.

Q2: Can the Balco 260 be placed on a balcony? Do I need to move it indoors during rain?

- A:** Yes. The Balco 260 is IP65-rated for dust and splash resistance, making it ideal for balcony use. It can stay outdoors on sunny days and during light rain or showers. During heavy rain, storms, or other extreme weather conditions, we recommend moving it indoors or covering it for added protection.


Q3: Is it normal for the system to get warm during use?

- A:** Yes. A slight temperature rise during operation is normal. The Balco 260 is fully tested and includes built-in overheat protection, so this will not affect its lifespan. For proper heat dissipation, leave 37–47 mm clearance around the system.

Q4: How does the Balco 260 help reduce electricity bills with solar energy?

- A:** Solar power is prioritized for running household appliances during the day, and any excess energy is automatically stored in the battery. At night or when sunlight is insufficient, the system uses stored energy to power your home, reducing reliance on the grid and lowering your electricity costs.


- Q5:** What solar panels are compatible with the Balco 260 system, and how should they be connected?
- A:** The Balco 260 has four independent PV input ports (PV1–PV4). Each input supports up to 600 W, with a maximum voltage of 60 V and a maximum current of 16 A. We recommend using solar panels with a total open-circuit voltage (V_{oc}) of 15 V–60 V per MPPT.
- For more than four panels, connect them in parallel and keep within input limits.
- Q6:** What's the maximum solar charging power?
- A:** The maximum solar charging power is 2,400 W, with each MPPT input supporting up to 600 W.
- Q7:** How do I connect the compatible 450 W rigid solar panels?
- A:** Connect the MC4 connectors of each panel directly to one PV input (PV1–PV4) until you hear a click (see [Section 5.1](#) for details).
- Q8:** Can I use solar parallel charging cables to connect one solar panel to multiple PV inputs on the Balco 260?
- A:** No. This could damage the Balco 260 and your solar panels (see [Section 5.1](#) for details).

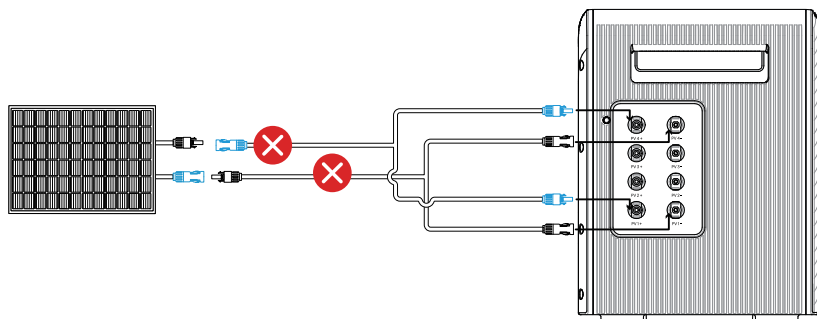

- Q9:** Can I expand the battery capacity of the Balco 260 system?
- A:** Yes. You can add up to 5 BC260 battery packs as your energy needs grow, with no extra wiring required.
- Q10:** Are there any third-party 600 W solar panels compatible with the system?
- A:** Yes. You can use Jinko Tiger Neo 600 W series, with an open-circuit voltage (V_{oc}) of approximately 53 V and a short-circuit current (I_{sc}) of approximately 14.3 A.
- Q11:** Why is the charging power sometimes low?
- A:** The built-in BMS adjusts the charging power based on battery temperature and SoC to protect the battery and extend its life.

Q12: How does the battery self-heating mode work on the Balco 260 system?

A: When the system is connected to solar panels or the grid, heating activates automatically below 5°C. It can also be enabled in the BLUETTI app for use below 12°C.

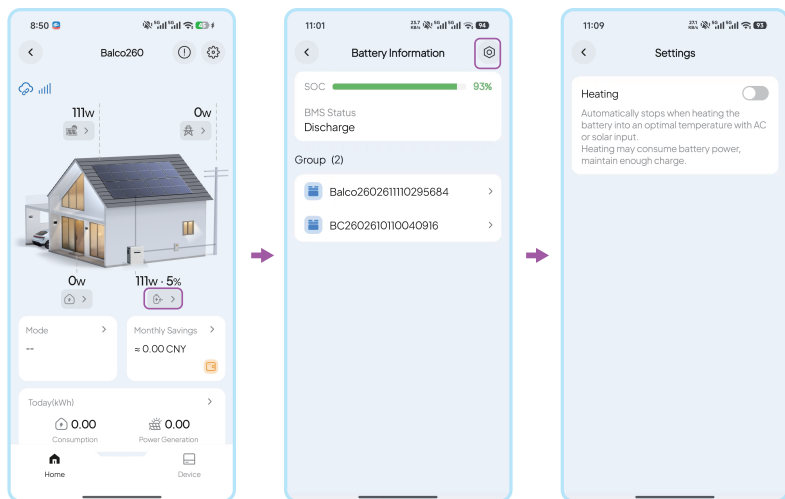

Q13: Will the Balco 260 still be working during a power outage?

A: Yes. During a power outage, the system provides up to 1,200 W of off-grid AC output. Grid-tied output will stop until utility power is restored.

Q14: Does the installation direction of the solar panels matter?

A: Yes. The installation direction and tilt angle directly affect solar generation:

- **South-facing (Highly recommended):** Provides the highest solar output in most cases.
- **East- or west-facing:** Better for matching daily energy use—east-facing works well for morning demand, while west-facing is better for afternoon use. Using both directions balances power generation throughout the day.
- **Tilt angle:** 20°–35° recommended. Vertical installation on a balcony railing can perform better in winter when the sun is lower.

Q15: Will dust on the solar panels affect solar charging?

A: Yes. Dust, leaves, bird droppings, and other debris can reduce solar charging efficiency and overall power generation. It's recommended to clean the panels regularly with a soft cloth to maintain optimal performance. Consider professional cleaning if needed.

Q16: How can I improve long-term solar power generation?

- A:**
- **Keep the panels clean:** Remove dust, dirt, leaves, and bird droppings promptly.
 - **Adjust positioning:** Avoid shading from trees or buildings. Reposition the panel or adjust the tilt when necessary to reduce shading.

Q17: What does the smart meter do?

- A:** The smart meter monitors your household power usage in real time and sends the data to the Balco 260 system. This helps the system automatically optimize power distribution, such as adjusting charging and discharging power.

Q18: What other smart meters are compatible with the Balco 260?

- A:** Shelly Pro 3EM and everHome EcoTracker IR.

Q19: What is the correct CT direction for the smart meter?

- A:** The arrow should point from the grid toward the Balco 260 system.

Q20: How many S1 smart plugs can I use with the Balco 260 system?

- A:** You can connect up to 8 S1 smart plugs.

Q21: How do I feed power back to the grid?

- A:** You can choose from two modes:

- **Self-Consumption Mode**

The system powers your home first and automatically feeds excess power into the grid when:

a) Solar input power is higher than household load power.

b) The battery is fully charged.

c) **Feed into Grid** switch is enabled in **Advanced Settings** in the BLUETTI app.

- **Custom Mode**

Select **Custom** working mode in the app, enable **Time of Use**, and set the discharge period. The system will feed excess power into the grid during the scheduled time.


Note: Before feeding power into the grid, make sure the bidirectional AC power cable is securely connected to the wall outlet and your home circuit is working properly.

Q22: Can I control the Balco 260 remotely?

- A:** Yes. Once the system is paired in the app and connected to Wi-Fi, you can check solar generation, battery status, and adjust working modes or charging/discharging settings from anywhere.

Q23: How can I check the Balco 260 system's energy statistics?


A: In the BLUETTI app, you can view real-time solar input, battery level, and load output, as well as solar generation and energy savings by day, month, or year.

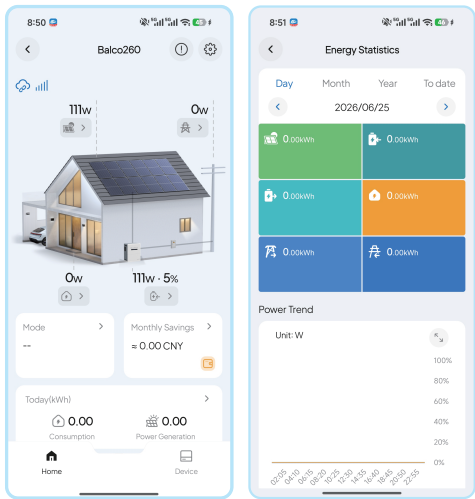

Q24: How do I update the firmware?

A: Follow the steps shown below.

Note: Firmware updates are available only when your phone is connected to the Balco 260 via Bluetooth. Keep your phone within 5 meters for a stable connection.

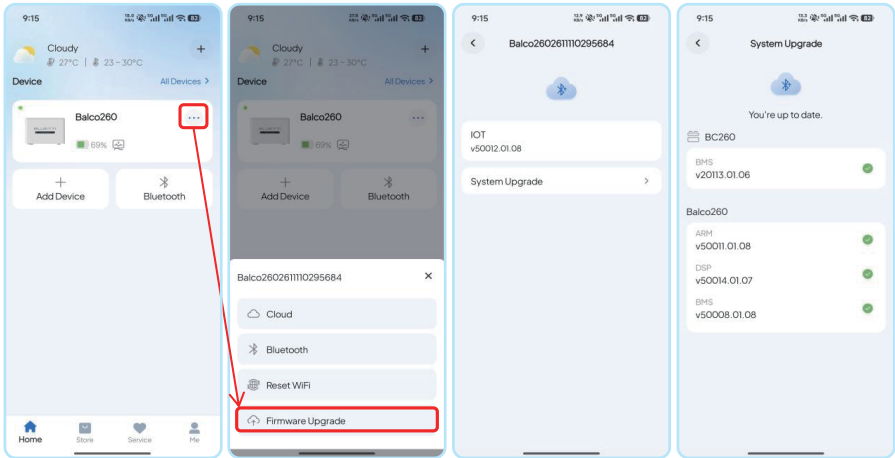

Q25: What if I can't pair the S Meter?

- A:**
- a) Make sure your app is up to date and check for available firmware updates.
 - b) Ensure the S Meter and Balco 260 are connected to the same Wi-Fi network.
 - c) Restore the system to factory settings and re-pair.
 - d) Keep your phone close to both the S Meter and the Balco 260 during pairing.

Q26: Why can't the system feed power back to the grid?


- A:**
- Check that **Feed into Grid** is enabled in the BLUETTI app.
 - Ensure the bidirectional AC power cable is securely plugged into the wall outlet.
 - Confirm that the wall outlet has power and the connection is stable. You can test it with another appliance.

Q27: Why did I set the feed-in power to 800 W, but the app shows only around 769 W?

- A:**
- This is normal. Actual output may vary due to local grid voltage fluctuations. The system calculates power based on a standard 230 V grid voltage. When you set 800 W, it fixes the output current. If the local grid voltage is lower, the actual output power will also be lower, while maintaining the same current.

Q28: Why does the app display incorrect power data in Self-consumption Mode?

- A:**
- Update the S Meter to the latest IoT firmware.
 - Make sure the arrow on the CT points toward the Balco 260 system. An incorrect direction can lead to inaccurate readings.

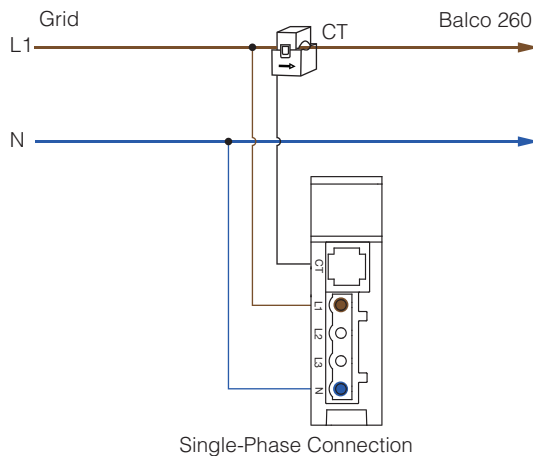

Need help? We're here for you!

Customer Service (DE)

☎ +49 0800 6273016 (Mon–Fri: 09:00–12:00, 13:00–18:00)

✉ sale-de@bluettipower.com

Customer Service (UK)

☎ +44 8000472906 (Mon–Fri: 08:00–12:00, 13:00–17:00)

✉ sale-uk@bluettipower.com

Customer Service (EU & UA)

☎ +49 8006273016 (Mon–Fri: 09:00–12:00, 13:00–18:00)

✉ sale-eu@bluettipower.com

Customer Service (FR)

☎ +33 257588052 (Mon–Fri: 08:00–12:00, 13:00–17:00)

✉ sale-fr@bluettipower.com

Customer Service (IT)

☎ +39 0810808309 (Mon–Fri: 08:00–12:00, 13:00–17:00)

✉ sale.it@bluettipower.com

Customer Service (ES)

☎ +34 912159066 (Mon–Fri: 08:00–12:00, 13:00–17:00)

✉ bluetti-es@bluettipower.com

EU REP


POWEROAK GmbH

Schumannstraße 27, 6. OG, 60325 Frankfurt am Main

UK REP

POWEROAK ENERGY UK CO., LTD

Unit 2 NorthGate, Bolsover Business Park, Woodhouse Lane
Chesterfield England, S44 6BD

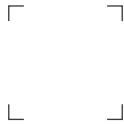

Certificate

Inspector: _____

QC: _____

Always Share Excellence